


GO6 Installation Reference Manual

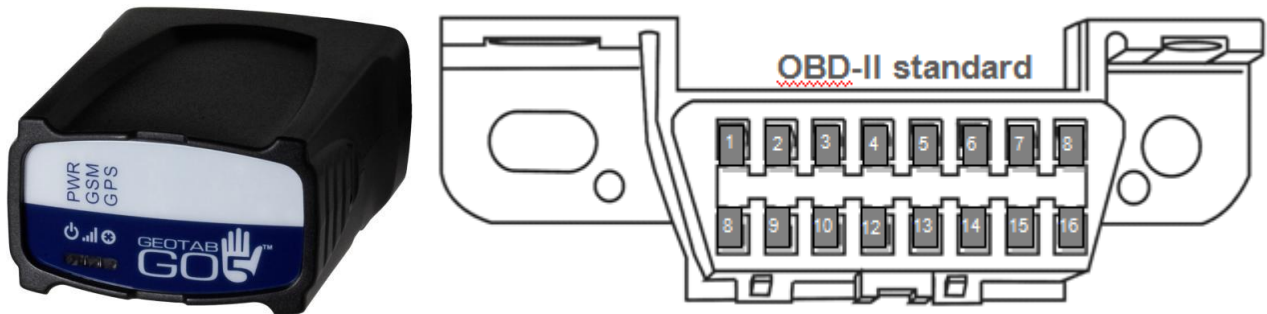

Requirements

- GO6 device
- Open, clear view of the sky for GPS connectivity
- *Optional* SPR-GO6INSTALLPACK

Installation Instructions: GO6 with Install Pack (HRN-EZCP)



1. After unpacking the GO6 device, ensure there is no physical damage to it.
2. Locate the vehicle's diagnostic connector which is present on all newer vehicles (1996 onwards). This connector is typically located at some convenient place under the dashboard on the driver's side.



3. In this application, the HRN-EZCP MUST plug directly into the GO6 and then into the vehicle.
4. Ensure that the GO6 device is securely in place.

Where driver interference may occur, the GO6 should be installed in an alternative location using the extension harness kit. Below are some other optional locations to choose from:

On The Dashboard

- 1) Apply Velcro pad to the GO6 device ensuring that the G# is visible.
- 2) Secure the device in place on the Velcro pad.



On The Windshield

- 1) The harness should be installed as close as possible to the lower left corner of the windshield
- 2) Use the double sided adhesive strip, firmly attach to the windshield. The placement of the device must not impede driver visibility.



5. The device will beep 3 times indicating that it has powered up and the 3 LEDs will illuminate for a brief period.




6. Start the vehicle and observe the LEDs:
 - a. When the ignition is “ON” and the vehicle is running, the RED LED will illuminate.
 - b. Next the Green LED will illuminate indicating that the unit has connected to the GSM (Cellular) network and established a link to GEOTAB’s STORE AND FORWARD server.
 - c. The first time the device is connected to a vehicle, the GPS Satellite latch may take several minutes. The Blue LED will illuminate once GPS latch has occurred.
 - d. Once ALL three LEDs are illuminated there will be several audible beeps. These are diagnostic beeps and should be ignored.

The following steps are mandatory for the activation of your device

- 1) Log on to <http://install.geotab.com> and complete all the fields provided.

Typical Installation-log fields:

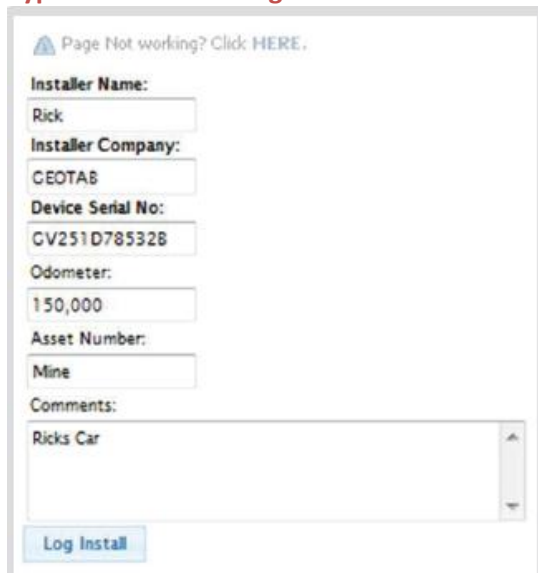

Page Not working? Click [HERE](#).

Installer Name:
Rick

Installer Company:
GEOTAB

Device Serial No:
GV251D78532B

Odometer:
150,000

Asset Number:
Mine

Comments:
Ricks Car

[Log Install](#)

Enter: Installer name, Company, GO6 Serial #, Odometer, Asset # and any relevant comments

Successful Validation:

Engine running within the last 60 minutes



Page Not working? Click [HERE](#).

Device Analysis


Device Serial Number:
GV251D78532B

Current Status:
Device Communicating with server

[Close](#) [Retry Lookup](#) [More Info >>](#)

Successful Validation:

Engine has not run within the last 60 minutes

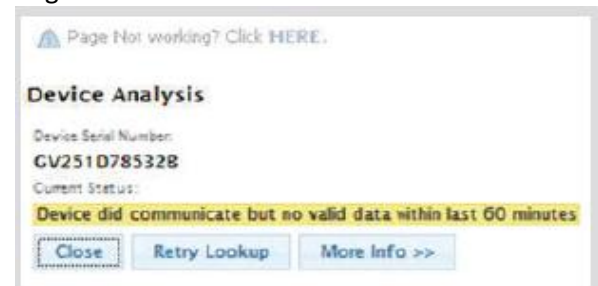

Page Not working? Click [HERE](#).

Device Analysis

Device Serial Number:
GV251D78532B

Current Status:
Device did communicate but no valid data within last 60 minutes

[Close](#) [Retry Lookup](#) [More Info >>](#)

If the registration attempt was successful you will see a screen similar to this.

Support

Ask a question to our support helpdesk at support@pinpointgps.ca or call 1 800-624-6477 ext 304